



Alfa Romeo
MONTECARLO

Fusebox A

- 1 Ignition / Fuel pump
- 2 Ignition / Fuel pump
- 3 Parking lights
- 4 Parking lights
- 5 Left hand high beam
- 6 Right hand high beam
- 7 Left hand low beam
- 8 Right hand low beam

Fusebox B

- 1 Heated Rear Window
- 2 Fog lamps
- 3 Left hand electric window
- 4 Right hand electric window
- 5 Electric fan
- 6 Courtesy lights / Radio
- 7 Screen wiper / Washer / Clock
- 8 Turn signal / Heater blower / Cigar Lighter

- 1 Front parking and directional indicator light - 5/21 W
- 2 "Head light, low beam - 55 W"
- 3 "Head light, high beam - 55 W"
- 4 Connector
- 5 Side directional indicator light - 4 W
- 6 Electric horn
- 7 Thermal switch for electric fan
- 8 Electric fan
- 9 Compressor for air horns
- 10 Engine compartment light switch
- 11 Engine compartment light - 5 W
- 12
- 13
- 14 Low fuel pressure warning light switch
- 15 Relay for electric fan

- 16 Horn relay
- 16A Overcurrent relay for electric windows (optional)
- 16B Relay for electric windows (optional)
- 17 Coil - Bosch ZS 7/9 C 8
- 18 Transistor control unit - Bosch BHKZ 12V
- 19 Distributor - Marelli S 127 C
- 20 Cold starting device solenoid
- 21 Starter - Bosch GF 12V 1 PS
- 22 Oil pressure gauge sender
- 23 Oil thermometer sender
- 23A Coolant thermometer sender
- 24 Reversing light switch
- 25 Stop light switch
- 26 Fuel cut off solenoid microswitch
- 27 Fuel cut off solenoid
- 28 Resistor for alternator excitation
- 29 Alternator - Bosch K1 -14V 55A 20
- 30 Voltage regulator - Bosch AD 1/14V
- 31 Headlight slats control valve
- 32
- 33
- 34
- 35 Heated rear window relay
- 36 Brake fluid level warning light switches
- 37 Blower motor - 2 speed
- 38 Fusebox
- 39 Screen wiper control unit
- 40 Windscreen wiper Bosch WS 4911 AR 2 A (O)
- 41 Windscreen washer
- 42 Windscreen washer switch
- 43 Map reading light - 5 W
- 44 Directional indicator warning light - 1.2 W
- 45 Courtesy light switch in mirror
- 46 Courtesy light in mirror - 5 W
- 47 Flasher unit
- 48 Instrument light - 3 W
- 49 Blower warning light - 3 W
- 50 Parking brake warning light - 3 W
- 51 Low fuel pressure warning light - 3 W
- 52 Parking light warning light - 3 W
- 53 High beam warning light - 3 W
- 54 Fuel reserve warning light - 3 W
- 55 Brake fluid level warning light - 1.2 W
- 56 Fluid level warning light testing switch (in light unit)
- 57 Switch panel light - 3 W
- 58 Electric window motor
- 59 Courtesy light switch (on door jams)
- 60 Door open switch (on door jams)
- 61 Door light - 3 W
- 62 Courtesy light - 4 W
- 63 Interior lighting switch
- 64 Control and instrument lights switch
- 65 "Electric window switch, right (optional)"
- 66 "Electric window switch, left (optional)"
- 67 Horn change over switch
- 68 Wind screen wiper switch
- 69 Heated rear window warning light - 1.2 W
- 70 Heated rear window switch
- 71 Blower switch
- 72 Cigarette lighter
- 73
- 74 Parking brake warning light switch
- 75 Ignition and starting switch
- 76 Horn control switch
- 77 "Parking light, head lights, and flashing switch"
- 78 Directional indicator switch
- 79 Luggage boot light switch
- 80 Boot light - 5 W
- 81 Fuel pump
- 82 Fuel reserve warning light switch & fuel level sender
- 83 Heated rear window
- 84 Battery - 12 V 64 Ah
- 85 Rear directional light - 25 W
- 86 Rear parking & stop light - 5/21 W
- 87 Reversing light - 25 W
- 88 Number plate light - 5 W